Base Load Power Hub (BLPH)

NITROGEN GENERATION PACKAGE A-64000

I/O LIST

Document Number: 1724000437-IN-LIS-00015

Document Class: 2

Rev.	Date	Description	Prepared	Reviewed	Approved
04	13/05/2025	Accepted for Construction (AFC)	GT	MC	TM
03	24/01/2025	Accepted for Construction (AFC)	GT	MC	TM
02	03/07/2024	Issue for Review (IFR)	GT	MC	TM
01	01/07/2024	Issue for Review (IFR)	GT	MC	TM
00	30/04/2024	Issue for Review (IFR)	GT	MC	TM

COES

This document undergoes an issuance cycle within EDMS Fusionlive". Its distribution is electronically controlled. Once printed shall be considered as "NOT CONTROLLED" copy

ISSUER:

ISSUER DOCUMENT CODE :

DOCUMENT TITLE :

INPUT-OUTPUT LIST

PROJECT DESCRIPTION :

COES_PSA 64-LP-001 (PSA LOCAL PANEL)

CLIENT :

CUSTOMER'S REFERENCES :

JOB
SYSTEM OR EQUIPMENT
CONTRACT
P. & ID.

0.3	05/05/2025	FOR APPROVAL	RM	RM	RM
0.2	11/09/2024	FOR APPROVAL	RM	RM	RM
0.1	01/07/2024	FOR APPROVAL	RM	RM	RM
0.0	21/04/2024	FOR APPROVAL	RM	RM	RM
Rev.	**Date**	**Purpose of issue**	**Prepared by**	**Checked by**	**Approved by**


HARDWARE CONFIGURATION

N. SLOT	CODE	DESCRIPTION
N2 A-64000 (PSA LOCAL PANEL)		
CPU + ADDITIONAL COMPONENTS		
CPU_A	6ES7513-1RL00-0AB0 + 6ES7954-8LE03-0AA0	CPU 1513R-1PN SIMATIC S7-1500R, CPU 1513R-1PN, central processing unit with 300 KB work memory for program and 1.5 MB for data, 1st interface: PROFINET RT with 2-port switch +MEMORY CARD 12MB (6ES7954-8LE03-0AA0)
CPU_B	6ES7513-1RL00-0AB0 + 6ES7954-8LE03-0AA0	CPU 1513R-1PN SIMATIC S7-1500R, CPU 1513R-1PN, central processing unit with 300 KB work memory for program and 1.5 MB for data, 1st interface: PROFINET RT with 2-port switch +MEMORY CARD 12MB (6ES7954-8LE03-0AA0)
SWITCH	6GK5205-3BD00-2AB2	SCALANCE XB205-3 manageable Layer 2 IE Switch 5x porte RJ45 da 10/100 Mbit/s 3x porta MM FO SC 1x porta di console, LED di diagnostica, ridondante alimentazione di tensione; certificato IEC 62443-4-2
PN/PN Coupler	6ES7158-3AD10-0XA0	SIMATIC PN/PN Coupler for deterministic data exchange between max.4 PN-Controller per subnet, also from subnet to subnet, PROFIsafe data exchange, I/O-, MSI-, MSO- and data record communication, redundant power supply
RACK I/O		
SLOT 0	6ES7155-6AU01-0CN0 + 6ES7193-6AR00-0AA0	ET 200SP, IM155-6PN/2 HF SIMATIC ET 200SP, PROFINET, 2-port interface module IM 155-6PN/2 High Feature(6ES7155-6AU01-0CN0), 1 slot for BusAdapter, max. 64 I/O modules and 16 ET 200AL modules, S2 redundancy, multi-hotswap, 0.25 ms, isochronous mode, optional PN strain relief, including server module (6ES7193-6PA00-0AA0) + BusAdapter BA 2xRJ45 (6ES7193-6AR00-0AA0)
SLOT 1	6ES7131-6BF01-0AA0 + 6ES7193-6BP00-0DA0	ET 200SP, DI 8x 24V DC Basic, PU □ SIMATIC ET 200SP, Digital input module, DI 8x 24V DC Basic, type 2 (IEC 61131), sink input, (PNP, P-reading) (6ES7131-6BF01-0AA0) and BaseUnit BU15-P16+A0+2D, BU type A0, push-in terminals, without aux. terminals, new load group (6ES7193-6BP00-0DA0)
SLOT 2	6ES7131-6BF01-0AA0 +6ES7193-6BP00-0BA0	ET 200SP, DI 8x 24V DC Basic, PU □ SIMATIC ET 200SP, Digital input module, DI 8x 24V DC Basic, type 2 (IEC 61131), sink input, (PNP, P-reading) (6ES7131-6BF01-0AA0) BaseUnit BU15-P16+A0+2B, BU type A0, Push-in terminals, without AUX terminals, load group bridged to the left (6ES7193-6BP00-0BA0)
SLOT 3	6ES7131-6BF01-0AA0 +6ES7193-6BP00-0BA0	ET 200SP, DI 8x 24V DC Basic, PU □ SIMATIC ET 200SP, Digital input module, DI 8x 24V DC Basic, type 2 (IEC 61131), sink input, (PNP, P-reading) (6ES7131-6BF01-0AA0) BaseUnit BU15-P16+A0+2B, BU type A0, Push-in terminals, without AUX terminals, load group bridged to the left (6ES7193-6BP00-0BA0)
SLOT 4	6ES7131-6BF01-0AA0 +6ES7193-6BP00-0BA0	ET 200SP, DI 8x 24V DC Basic, PU □ SIMATIC ET 200SP, Digital input module, DI 8x 24V DC Basic, type 2 (IEC 61131), sink input, (PNP, P-reading) (6ES7131-6BF01-0AA0) BaseUnit BU15-P16+A0+2B, BU type A0, Push-in terminals, without AUX terminals, load group bridged to the left (6ES7193-6BP00-0BA0)
SLOT 5	6ES7132-6BF01-0AA0 + 6ES7193-6BP00-0DA0	ET 200SP, DQ 8x 24V DC/0,5A Basic, PU □ SIMATIC ET 200SP, Digital output module, DQ 8x 24V DC/0,5A Basic, Source output (PNP,P-switching) (6ES7132-6BF01-0AA0) and BaseUnit BU15-P16+A0+2D, BU type A0, push-in terminals, without aux. terminals, new load group (6ES7193-6BP00-0DA0)
SLOT 6	6ES7132-6BF01-0AA0 +6ES7193-6BP00-0BA0	ET 200SP, DQ 8x 24V DC/0,5A Basic, PU □ SIMATIC ET 200SP, Digital output module, DQ 8x 24V DC/0,5A Basic, Source output (PNP,P-switching) (6ES7132-6BF01-0AA0) BaseUnit BU15-P16+A0+2B, BU type A0, Push-in terminals, without AUX terminals, load group bridged to the left (6ES7193-6BP00-0BA0)
SLOT 7	6ES7132-6BF01-0AA0 +6ES7193-6BP00-0BA0	ET 200SP, DQ 8x 24V DC/0,5A Basic, PU □ SIMATIC ET 200SP, Digital output module, DQ 8x 24V DC/0,5A Basic, Source output (PNP,P-switching) (6ES7132-6BF01-0AA0) BaseUnit BU15-P16+A0+2B, BU type A0, Push-in terminals, without AUX terminals, load group bridged to the left (6ES7193-6BP00-0BA0)
SLOT 8	6ES7134-6GD01-0BA1 + 6ES7193-6BP00-0DA0	ET 200SP, AI 4XI 2-/4-Wire ST, PU 1 SIMATIC ET 200SP, ANALOG INPUT MODULE, AI 4XI 2-/4-WIRE STANDARD (6ES7134-6GD01-0BA1) and BaseUnit BU15-P16+A0+2D, BU type A0, push-in terminals, without aux. terminals, new load group (6ES7193-6BP00-0DA0)
SLOT 9	6ES7134-6GD01-0BA1 +6ES7193-6BP00-0BA0	ET 200SP, AI 4XI 2-/4-Wire ST, PU 1 SIMATIC ET 200SP, ANALOG INPUT MODULE, AI 4XI 2-/4-WIRE STANDARD (6ES7134-6GD01-0BA1) BaseUnit BU15-P16+A0+2B, BU type A0, Push-in terminals, without AUX terminals, load group bridged to the left (6ES7193-6BP00-0BA0)
SLOT 10	/	Modulo Server (Incluso nella 6ES7155-6AU01-0CN0 - Slot 0)

Note: Base unit connection for each I/O Card has been indicated in I/O List sheet.

NETWORK ARCHITECTURE

NR	IP ADDRESS	COMMENT
1	192.168.9.1 / 255.255.255.0	REDUNDANCY CPUs SYSTEM ADDRESS
2	192.168.9.2 / 255.255.255.0	PLC 1 ADDRESS
3	192.168.9.3 / 255.255.255.0	PLC 2 ADDRESS
4	192.168.9.4 / 255.255.255.0	SWITCH ADDRESS
5	192.168.9.5 / 255.255.255.0	INTERFACE MODULE ADDRESS (I/O RACK)
6	192.168.9.6 / 255.255.255.0	COUPLER ADDRESS (IN THE RING)
7	192.168.9.7 / 255.255.255.0	COUPLER ADDRESS(NOT IN THE RING)

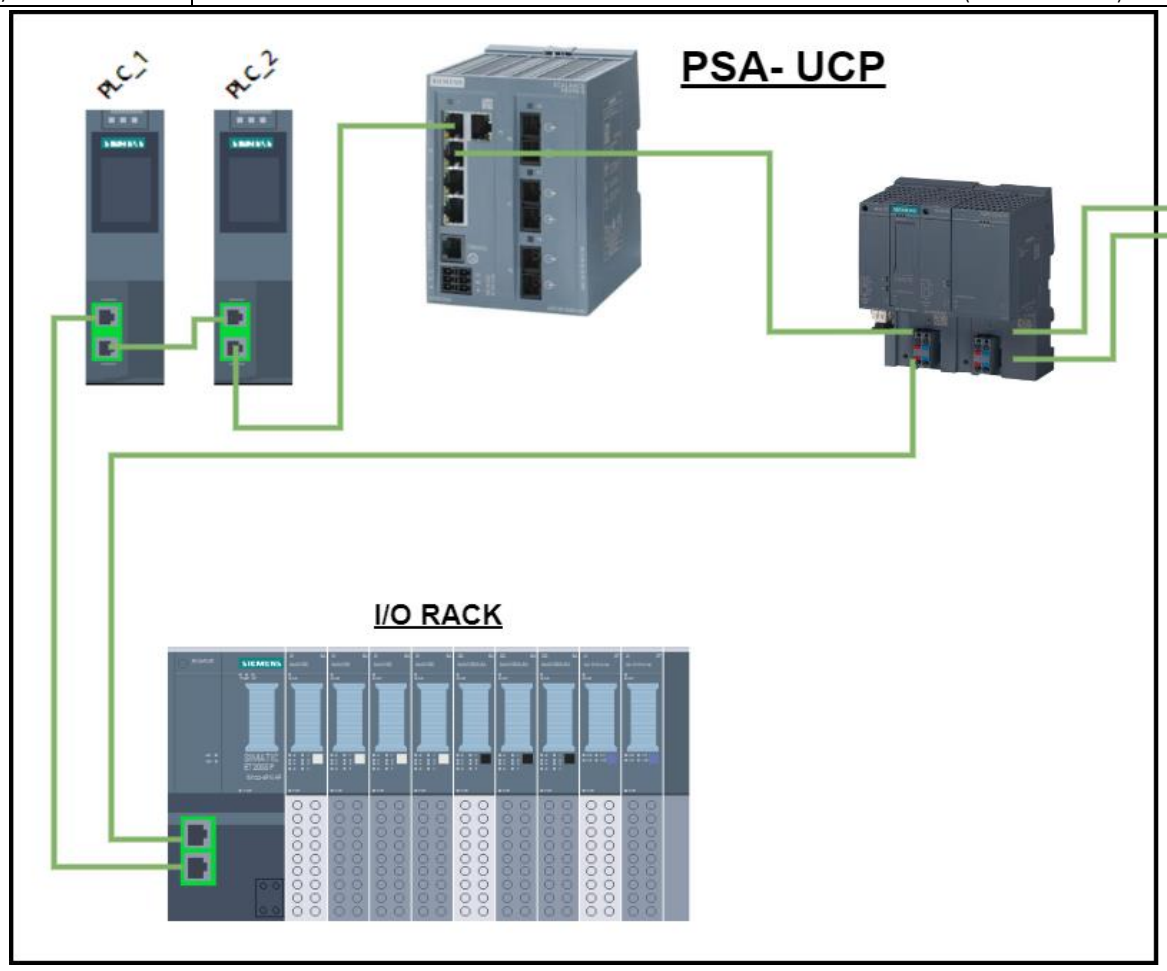

N2 A-64000 (PSA LOCAL PANEL)				
CPU RACK				
CPU_1	CPU 1513R-1PN	6ES7513-1RL00-0AB0		
CPU_2	CPU 1513R-1PN	6ES7513-1RL00-0AB0		
I/O RACK				
RACK F1 SLOT 0	ET 200SP, IM155-6PN/2 HF	6ES7155-6AU01-0CN0		
RACK F1 SLOT 1	INPUT MODULE: DI 8x 24V DC Basic	6ES7131-6BF01-0AA0		BASE UNIT: 6ES7193-6BP00-0DA0 (WHITE type +A0, BU15-P16+A0+2D)
RACK F1 SLOT 1 IN 0	%I0.0	VALVE 64-XV-051 OPEN LIMIT SWITCH	64-ZSH-051	
RACK F1 SLOT 1 IN 1	%I0.1	VALVE 64-XV-051 CLOSED LIMIT SWITCH	64-ZSL-051	
RACK F1 SLOT 1 IN 2	%I0.2	VALVE 64-XV-052 OPEN LIMIT SWITCH	64-ZSH-052	
RACK F1 SLOT 1 IN 3	%I0.3	VALVE 64-XV-052 CLOSED LIMIT SWITCH	64-ZSL-052	
RACK F1 SLOT 1 IN 4	%I0.4	VALVE 64-XV-053 OPEN LIMIT SWITCH	64-ZSH-053	
RACK F1 SLOT 1 IN 5	%I0.5	VALVE 64-XV-053 CLOSED LIMIT SWITCH	64-ZSL-053	
RACK F1 SLOT 1 IN 6	%I0.6	VALVE 64-XV-054 OPEN LIMIT SWITCH	64-ZSH-054	
RACK F1 SLOT 1 IN 7	%I0.7	VALVE 64-XV-054 CLOSED LIMIT SWITCH	64-ZSL-054	
RACK F1 SLOT 2	INPUT MODULE: DI 8x 24V DC Basic	6ES7131-6BF01-0AA0		BASE UNIT: 6ES7193-6BP00-0BA0 (BLACK, type A0, BU15-P16+A0+2B)
RACK F1 SLOT 2 IN 0	%I1.0	VALVE 64-XV-055 OPEN LIMIT SWITCH	64-ZSH-055	
RACK F1 SLOT 2 IN 1	%I1.1	VALVE 64-XV-055 CLOSED LIMIT SWITCH	64-ZSL-055	
RACK F1 SLOT 2 IN 2	%I1.2	VALVE 64-XV-056 OPEN LIMIT SWITCH	64-ZSH-056	
RACK F1 SLOT 2 IN 3	%I1.3	VALVE 64-XV-056 CLOSED LIMIT SWITCH	64-ZSL-056	
RACK F1 SLOT 2 IN 4	%I1.4	VALVE 64-XV-057 OPEN LIMIT SWITCH	64-ZSH-057	
RACK F1 SLOT 2 IN 5	%I1.5	VALVE 64-XV-057 CLOSED LIMIT SWITCH	64-ZSL-057	
RACK F1 SLOT 2 IN 6	%I1.6	VALVE 64-XV-058 OPEN LIMIT SWITCH	64-ZSH-058	
RACK F1 SLOT 2 IN 7	%I1.7	VALVE 64-XV-058 CLOSED LIMIT SWITCH	64-ZSL-058	
RACK F1 SLOT 3	INPUT MODULE: DI 8x 24V DC Basic	6ES7131-6BF01-0AA0		BASE UNIT: 6ES7193-6BP00-0BA0 (BLACK, type A0, BU15-P16+A0+2B)
RACK F1 SLOT 3 IN 0	%I2.0	VALVE 64-XV-059 OPEN LIMIT SWITCH	64-ZSH-059	
RACK F1 SLOT 3 IN 1	%I2.1	VALVE 64-XV-059 CLOSED LIMIT SWITCH	64-ZSL-059	
RACK F1 SLOT 3 IN 2	%I2.2	INTERNAL CABINET THERMOSTAT	64-TH-001	
RACK F1 SLOT 3 IN 3	%I2.3	LOCAL START PUSH BUTTON	64-HS-001	
RACK F1 SLOT 3 IN 4	%I2.4	LOCAL STOP PUSH BUTTON	64-HS-002	
RACK F1 SLOT 3 IN 5	%I2.5	LOCAL ALARM RESET	64-HS-003	
RACK F1 SLOT 3 IN 6	%I2.6	LOCAL REMOTE SELECTOR STATUS	64-HS-004	
RACK F1 SLOT 3 IN 7	%I2.7	SHUTDOWN ALARM FROM SIS - INDICATION ONLY (0=FAULT)	64-ESD-001	This standard signal is only an indication of cumulative critical alarms: 64-XS-001 (processed by SIL 2 Relay) & Emergency pushbutton on 63-LP-001
RACK F1 SLOT 4	INPUT MODULE: DI 8x 24V DC Basic	6ES7131-6BF01-0AA0		BASE UNIT: 6ES7193-6BP00-0BA0 (BLACK, type A0, BU15-P16+A0+2B)
RACK F1 SLOT 4 IN 0	%I3.0	VALVE 64-XV-060 OPEN LIMIT SWITCH	64-ZSH-060	
RACK F1 SLOT 4 IN 1	%I3.1	VALVE 64-XV-060 CLOSED LIMIT SWITCH	64-ZSL-060	
RACK F1 SLOT 4 IN 2	%I3.2	VALVE 64-XV-061 OPEN LIMIT SWITCH	64-ZSH-061	
RACK F1 SLOT 4 IN 3	%I3.3	VALVE 64-XV-061 CLOSED LIMIT SWITCH	64-ZSL-061	
RACK F1 SLOT 4 IN 4	%I3.4	SPARE		
RACK F1 SLOT 4 IN 5	%I3.5	SPARE		
RACK F1 SLOT 4 IN 6	%I3.6	SPARE		
RACK F1 SLOT 4 IN 7	%I3.7	SPARE		
RACK F1 SLOT 5	OUTPUT MODULE: DQ 8x 24V DC/0,5A	6ES7132-6BF01-0AA0		BASE UNIT: 6ES7193-6BP00-0DA0 (WHITE type +A0, BU15-P16+A0+2D)
RACK F1 SLOT 5 OUT 0	%Q0.0	VALVE 64-XV-051 COMMAND	64-XV-051	
RACK F1 SLOT 5 OUT 1	%Q0.1	VALVE 64-XV-052 COMMAND	64-XV-052	
RACK F1 SLOT 5 OUT 2	%Q0.2	VALVE 64-XV-053 COMMAND	64-XV-053	
RACK F1 SLOT 5 OUT 3	%Q0.3	VALVE 64-XV-054 COMMAND	64-XV-054	
RACK F1 SLOT 5 OUT 4	%Q0.4	VALVE 64-XV-055 COMMAND	64-XV-055	
RACK F1 SLOT 5 OUT 5	%Q0.5	VALVE 64-XV-056 COMMAND	64-XV-056	
RACK F1 SLOT 5 OUT 6	%Q0.6	VALVE 64-XV-057 COMMAND	64-XV-057	
RACK F1 SLOT 5 OUT 7	%Q0.7	VALVE 64-XV-058 COMMAND	64-XV-058	
RACK F1 SLOT 6	OUTPUT MODULE: DQ 8x 24V DC/0,5A	6ES7132-6BF01-0AA0		BASE UNIT: 6ES7193-6BP00-0BA0 (BLACK, type A0, BU15-P16+A0+2B)
RACK F1 SLOT 6 OUT 0	%Q1.0	VALVE 64 XV-059 COMMAND	64-XV-059	
RACK F1 SLOT 6 OUT 1	%Q1.1	SPARE		
RACK F1 SLOT 6 OUT 2	%Q1.2	RUNNING SYSTEM LAMP	64-XL-003	
RACK F1 SLOT 6 OUT 3	%Q1.3	GENERAL ALARM SYSTEM LAMP	64-XA-001	
RACK F1 SLOT 6 OUT 4	%Q1.4	NITROGEN GENERATOR RUNNING (TO DCS)	64-XL-003-DCS	
RACK F1 SLOT 6 OUT 5	%Q1.5	NITROGEN GENERATOR ALARM (TO DCS)	64-XA-001-DCS	
RACK F1 SLOT 6 OUT 6	%Q1.6	VALVE 64 XV-060 COMMAND	64-XV-060	
RACK F1 SLOT 6 OUT 7	%Q1.7	VALVE 64 XV-061 COMMAND	64-XV-061	
RACK F1 SLOT 7	OUTPUT MODULE: DQ 8x 24V DC/0,5A	6ES7132-6BF01-0AA0		BASE UNIT: 6ES7193-6BP00-0BA0 (BLACK, type A0, BU15-P16+A0+2B)
RACK F1 SLOT 7 OUT 0	%Q2.0	SPARE		
RACK F1 SLOT 7 OUT 1	%Q2.1	RESET PB FORCE THE OUTPUT SIGNAL 64-XA-003 TO 1 FOR 5 SECOND	RESET_FORCED	
RACK F1 SLOT 7 OUT 2	%Q2.2	SPARE		
RACK F1 SLOT 7 OUT 3	%Q2.3	SPARE		
RACK F1 SLOT 7 OUT 4	%Q2.4	SPARE		
RACK F1 SLOT 7 OUT 5	%Q2.5	SPARE		
RACK F1 SLOT 7 OUT 6	%Q2.6	SPARE		
RACK F1 SLOT 7 OUT 7	%Q2.7	SPARE		
RACK F1 SLOT 8	AN. INPUT MODULE: AI 4xI 2/4 wire 4-20mA	6ES7134-6GD01-0BA1		BASE UNIT: 6ES7193-6BP00-0DA0 (WHITE type +A0, BU15-P16+A0+2D)
RACK F1 SLOT 8 A. IN. 0	%IW4	INLET PRESSUTE TRANSMITTER	64-PT-051	
RACK F1 SLOT 8 A. IN. 1	%IW6	TOWER 1 PRESSURE TRANSMITTER	64-PT-052	
RACK F1 SLOT 8 A. IN. 2	%IW8	TOWER 2 PRESSURE TRANSMITTER	64-PT-053	
RACK F1 SLOT 8 A. IN. 3	%IW10	OUTLET B PRESSURE TRANSMITTER	64-PT-057	
RACK F1 SLOT 9	AN. INPUT MODULE: AI 4xI 2/4 wire 4-20mA	6ES7134-6GD01-0BA1		BASE UNIT: 6ES7193-6BP00-0BA0 (BLACK, type A0, BU15-P16+A0+2B)
RACK F1 SLOT 9 A. IN. 0	%IW12	PRESSURE TRANSMITTER INSTRUMENT AIR RECIEVER	64-PT-059	
RACK F1 SLOT 9 A. IN. 1	%IW14	DIFFERENTIAL PRESSURE TRANSMITTER OUTLET FILTERS	64-PDIT-056	
RACK F1 SLOT 9 A. IN. 2	%IW16	OXYGEN TRANSMITTER	64-AT-051	
RACK F1 SLOT 9 A. IN. 3	%IW18	SPARE		
RACK 1 SLOT 9	SERVER MODULE	6ES7193-6PA00-0AA0		

N2 A-64000

Rev 4

PROFINET SIGNALS TABLE

N. BYTE	N. BIT	DATA TYPE	TAG	DESCRIPTION	MEANING	SCALING	OFFSET	READ/WRITE	
1000	0	BOOL	RED_FAIL	REDUNDANCY CPU FAILURE	0=ALARM, 1=OK			R	ALARMS
	1	BOOL	CPU_SWITCH	PRIMARY CPU SWITCH	0=ALARM, 1=OK			R	
	2	BOOL	IM_ERR	IM ERROR	0=ALARM, 1=OK			R	
	3	BOOL	PNPN_ERR	PNPN COUPLER ERROR	0=ALARM, 1=OK			R	
	4	BOOL	NET_ERR	NETWORK PN/IE_1 ERROR	0=ALARM, 1=OK			R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL						R	
1001	0	BOOL	FILTER_1-H	DIFFERENTIAL PRESSURE EXCEEDED FOR AFTER FILTER 1 - ALARM	0=ALARM, 1=OK			R	
	1	BOOL	FILTER_2-H	DIFFERENTIAL PRESSURE EXCEEDED FOR AFTER FILTER 2 - ALARM	0=ALARM, 1=OK			R	
	2	BOOL	FILTERS-H	DIFFERENTIIAL PRESSURE EXCEEDED FOR BOTH AFTER FILTER	0=ALARM, 1=OK			R	
	3	BOOL		SPARE				R	
	4	BOOL	STOP_REQUEST	STOP TAKEN WAITING UNTIL THE END OF PHASE 5	1 = IN PROGRESS 0 = DONE			R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1002	0	BOOL		SPARE				R	
	1	BOOL		SPARE				R	
	2	BOOL		SPARE				R	
	3	BOOL		SPARE				R	
	4	BOOL		SPARE				R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1003	0	BOOL	64-TH-001-H	INTERNAL CABINET THERMOSTAT - ALARM	0=ALARM, 1=OK			R	
	1	BOOL		SPARE				R	
	2	BOOL		SPARE				R	
	3	BOOL		SPARE				R	
	4	BOOL		SPARE				R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1004	0	BOOL	64-XY-051-H	VALVE 64-XY-051 ALARM	0=ALARM, 1=OK			R	
	1	BOOL	64-XY-052-H	VALVE 64-XY-052 ALARM	0=ALARM, 1=OK			R	
	2	BOOL	64-XY-053-H	VALVE 64-XY-053 ALARM	0=ALARM, 1=OK			R	
	3	BOOL	64-XY-054-H	VALVE 64-XY-054 ALARM	0=ALARM, 1=OK			R	
	4	BOOL	64-XY-055-H	VALVE 64-XY-055 ALARM	0=ALARM, 1=OK			R	
	5	BOOL	64-XY-056-H	VALVE 64-XY-056 ALARM	0=ALARM, 1=OK			R	
	6	BOOL	64-XY-057-H	VALVE 64-XY-057 ALARM	0=ALARM, 1=OK			R	
	7	BOOL	64-XY-058-H	VALVE 64-XY-058 ALARM	0=ALARM, 1=OK			R	
1005	0	BOOL	64-XY-059-H	VALVE 64-XY-059 ALARM	0=ALARM, 1=OK			R	
	1	BOOL	64-XY-060-H	VALVE 64-XY-060 ALARM	0=ALARM, 1=OK			R	
	2	BOOL	64-XY-061-H	VALVE 64-XY-061 ALARM	0=ALARM, 1=OK			R	
	3	BOOL		SPARE				R	
	4	BOOL		SPARE				R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1006	0	BOOL		SPARE				R	
	1	BOOL		SPARE				R	
	2	BOOL		SPARE				R	
	3	BOOL		SPARE				R	
	4	BOOL		SPARE				R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1007	0	BOOL	64-PT-051-LL	INLET PRESSURE TRANSMITTER - LOW LOW ALARM (LL)	0=ALARM, 1=OK			R	
	1	BOOL	64-PT-051-L	INLET PRESSURE TRANSMITTER - LOW ALARM (L)	0=ALARM, 1=OK			R	
	2	BOOL	64-PT-051-H	INLET PRESSURE TRANSMITTER - HIGH ALARM (H)	0=ALARM, 1=OK			R	
	3	BOOL	64-PT-051-HH	INLET PRESSURE TRANSMITTER - HIGH HIGH ALARM (HH)	0=ALARM, 1=OK			R	
	4	BOOL	64-PT-052-LL	TOWER 1 PRESSURE TRANSMITTER - LOW LOW ALARM (LL)	0=ALARM, 1=OK			R	
	5	BOOL	64-PT-052-L	TOWER 1 PRESSURE TRANSMITTER - LOW ALARM (L)	0=ALARM, 1=OK			R	
	6	BOOL	64-PT-052-H	TOWER 1 PRESSURE TRANSMITTER - HIGH ALARM (H)	0=ALARM, 1=OK			R	
	7	BOOL	64-PT-052-HH	TOWER 1 PRESSURE TRANSMITTER - HIGH HIGH ALARM (HH)	0=ALARM, 1=OK			R	
1008	0	BOOL	64-PT-053-LL	TOWER 2 PRESSURE TRANSMITTER - LOW LOW ALARM (LL)	0=ALARM, 1=OK			R	
	1	BOOL	64-PT-053-L	TOWER 2 PRESSURE TRANSMITTER - LOW ALARM (L)	0=ALARM, 1=OK			R	
	2	BOOL	64-PT-053-H	TOWER 2 PRESSURE TRANSMITTER - HIGH ALARM (H)	0=ALARM, 1=OK			R	
	3	BOOL	64-PT-053-HH	TOWER 2 PRESSURE TRANSMITTER - HIGH HIGH ALARM (HH)	0=ALARM, 1=OK			R	
	4	BOOL	64-PT-057-LL	OUTLET B PRESSURE TRANSMITTER - LOW LOW ALARM (LL)	0=ALARM, 1=OK			R	
	5	BOOL	64-PT-057-L	OUTLET B PRESSURE TRANSMITTER - LOW ALARM (L)	0=ALARM, 1=OK			R	
	6	BOOL	64-PT-057-H	OUTLET B PRESSURE TRANSMITTER - HIGH ALARM (H)	0=ALARM, 1=OK			R	
	7	BOOL	64-PT-057-HH	OUTLET B PRESSURE TRANSMITTER - HIGH HIGH ALARM (HH)	0=ALARM, 1=OK			R	
1009	0	BOOL	64-PT-059-LL	PRESSURE TRANSMITTER INSTRUMENT AIR RECIEVER - LOW LOW ALARM (LL)	0=ALARM, 1=OK			R	
	1	BOOL	64-PT-059-L	PRESSURE TRANSMITTER INSTRUMENT AIR RECIEVER - LOW ALARM (L)	0=ALARM, 1=OK			R	
	2	BOOL	64-PT-059-H	PRESSURE TRANSMITTER INSTRUMENT AIR RECIEVER - HIGH ALARM (H)	0=ALARM, 1=OK			R	
	3	BOOL	64-PT-059-HH	PRESSURE TRANSMITTER INSTRUMENT AIR RECIEVER - HIGH HIGH ALARM (HH)	0=ALARM, 1=OK			R	
	4	BOOL	64-PDIT-056-LL	DIFFERENTIAL PRESSURE TRANSMITTER OUTLET FILTERS - LOW LOW ALARM (LL)	0=ALARM, 1=OK			R	
	5	BOOL	64-PDIT-056-L	DIFFERENTIAL PRESSURE TRANSMITTER OUTLET FILTERS - LOW ALARM (L)	0=ALARM, 1=OK			R	
	6	BOOL	64-PDIT-056-H	DIFFERENTIAL PRESSURE TRANSMITTER OUTLET FILTERS - HIGH ALARM (H)	0=ALARM, 1=OK			R	
	7	BOOL	64-PDIT-056-HH	DIFFERENTIAL PRESSURE TRANSMITTER OUTLET FILTERS - HIGH HIGH ALARM (HH)	0=ALARM, 1=OK			R	
1010	0	BOOL	64-AT-051-LL	OXYGEN TRANSMITTER - LOW LOW ALARM (LL)	0=ALARM, 1=OK			R	
	1	BOOL	64-AT-051-L	OXYGEN TRANSMITTER - LOW ALARM (L)	0=ALARM, 1=OK			R	
	2	BOOL	64-AT-051-H	OXYGEN TRANSMITTER - HIGH ALARM (H)	0=ALARM, 1=OK			R	
	3	BOOL	64-AT-051-HH	OXYGEN TRANSMITTER - HIGH HIGH ALARM (HH)	0=ALARM, 1=OK			R	
	4	BOOL		SPARE				R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1011	0	BOOL	64-PT-051-BADPV	INLET PRESSURE TRANSMITTER - BAD PROCESS VALUE	0=ALARM, 1=OK			R	
	1	BOOL	64-PT-052-BADPV	TOWER 1 PRESSURE TRANSMITTER - BAD PROCESS VALUE	0=ALARM, 1=OK			R	
	2	BOOL	64-PT-053-BADPV	TOWER 2 PRESSURE TRANSMITTER - BAD PROCESS VALUE	0=ALARM, 1=OK			R	
	3	BOOL	64-PT-057-BADPV	OUTLET B PRESSURE TRANSMITTER - BAD PROCESS VALUE	0=ALARM, 1=OK			R	
	4	BOOL	64-PT-059-BADPV	PRESSURE TRANSMITTER INSTRUMENT AIR RECIEVER - BAD PROCESS VALUE	0=ALARM, 1=OK			R	
	5	BOOL	64-PDIT-056-BADPV	DIFFERENTIAL PRESSURE TRANSMITTER OUTLET FILTERS - BAD PROCESS VALUE	0=ALARM, 1=OK			R	
	6	BOOL	64-AT-051-BADPV	OXYGEN TRANSMITTER - BAD PROCESS VALUE	0=ALARM, 1=OK			R	
	7	BOOL		SPARE				R	
1012	0	BOOL	64-ESD-SIS-001-H	PLANT SHUTDOWN ALARM (SIS)	0=SHUTDOWN ALARM, 1=OK			R	PLANT STATUS
	1	BOOL	64-ALARM-PLANT	PLANT GENERAL ALARM	0=CUMULATIVE STANDARD ALARM, 1=OK			R	
	2	BOOL	64-PLANT-READY	PLANT READY	0=NOT READY, 1=READY TO START			R	
	3	BOOL	64-PLANT-RUNNING	PLANT RUNNING	0=STOPPED, 1=RUNNING			R	
	4	BOOL	64-PLANT-LOCA-REM	PLANT IN REMOTE MODE	0=LOCAL (PLC), 1=REMOTE (DCS)			R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1013	0	BOOL	64-XY-051-DCS	VALVE 64-XY-051 COMMAND	1 = COMMAND			R	
	1	BOOL	64-XY-052-DCS	VALVE 64-XY-052 COMMAND	1 = COMMAND			R	
	2	BOOL	64-XY-053-DCS	VALVE 64-XY-053 COMMAND	1 = COMMAND			R	
	3	BOOL	64-XY-054-DCS	VALVE 64-XY-054 COMMAND	1 = COMMAND			R	
	4	BOOL	64-XY-055-DCS	VALVE 64-XY-055 COMMAND	1 = COMMAND			R	
	5	BOOL	64-XY-056-DCS	VALVE 64-XY-056 COMMAND	1 = COMMAND			R	
	6	BOOL	64-XY-057-DCS	VALVE 64-XY-057 COMMAND	1 = COMMAND			R	
	7	BOOL	64-XY-058-DCS	VALVE 64-XY-058 COMMAND	1 = COMMAND			R	
1014	0	BOOL	64-XY-059-DCS	VALVE 64-XY-059 COMMAND	1 = COMMAND			R	
	1	BOOL	64-XY-060-DCS	VALVE 64-XY-060 COMMAND	1 = COMMAND			R	
	2	BOOL	64-XY-061-DCS	VALVE 64-XY-061 COMMAND	1 = COMMAND			R	
	3	BOOL		SPARE				R	
	4	BOOL		SPARE				R	
	5	BOOL		SPARE				R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1015	0	BOOL	64-ZSH-051	VALVE 64-XY-051 OPEN	1 = OPEN			R	
	1	BOOL	64-ZSL-051	VALVE 64-XY-051 CLOSED	1 = CLOSED			R	
	2	BOOL	64-ZSH-052	VALVE 64-XY-052 OPEN	1 = OPEN			R	
	3	BOOL	64-ZSL-052	VALVE 64-XY-052 CLOSED	1 = CLOSED			R	

1015	4	BOOL	64-ZSH-053	VALVE 64-XY-053 OPEN	1 = OPEN			R	
	5	BOOL	64-ZSL-053	VALVE 64-XY-053 CLOSED	1 = CLOSED			R	
	6	BOOL	64-ZSH-054	VALVE 64-XY-054 OPEN	1 = OPEN			R	
	7	BOOL	64-ZSL-054	VALVE 64-XY-054 CLOSED	1 = CLOSED			R	
1016	0	BOOL	64-ZSH-055	VALVE 64-XY-055 OPEN	1 = OPEN			R	
	1	BOOL	64-ZSL-055	VALVE 64-XY-055 CLOSED	1 = CLOSED			R	
	2	BOOL	64-ZSH-056	VALVE 64-XY-056 OPEN	1 = OPEN			R	
	3	BOOL	64-ZSL-056	VALVE 64-XY-056 CLOSED	1 = CLOSED			R	
	4	BOOL	64-ZSH-057	VALVE 64-XY-057 OPEN	1 = OPEN			R	
	5	BOOL	64-ZSL-057	VALVE 64-XY-057 CLOSED	1 = CLOSED			R	
	6	BOOL	64-ZSH-058	VALVE 64-XY-058 OPEN	1 = OPEN			R	
	7	BOOL	64-ZSL-058	VALVE 64-XY-058 CLOSED	1 = CLOSED			R	
1017	0	BOOL	64-ZSH-059	VALVE 64-XY-059 OPEN	1 = OPEN			R	
	1	BOOL	64-ZSL-059	VALVE 64-XY-059 CLOSED	1 = CLOSED			R	
	2	BOOL	64-ZSH-060	VALVE 64-XY-060 OPEN	1 = OPEN			R	
	3	BOOL	64-ZSL-060	VALVE 64-XY-060 CLOSED	1 = CLOSED			R	
	4	BOOL	64-ZSH-061	VALVE 64-XY-061 OPEN	1 = OPEN			R	
	5	BOOL	64-ZSL-061	VALVE 64-XY-061 CLOSED	1 = CLOSED			R	
	6	BOOL		SPARE				R	
	7	BOOL		SPARE				R	
1018	/	REAL (IEEE 754)	64-PT-051-PV	INLET PRESSURE TRANSMITTER - PROCESS VALUE	range 0..16 barg			R	**MEASURES**
1022	/	REAL (IEEE 754)	64-PT-052-PV	TOWER 1 PRESSURE TRANSMITTER - PROCESS VALUE	range 0..16 barg			R	
1026	/	REAL (IEEE 754)	64-PT-053-PV	TOWER 2 PRESSURE TRANSMITTER - PROCESS VALUE	range 0..16 barg			R	
1030	/	REAL (IEEE 754)	64-PT-057-PV	OUTLET B PRESSURE TRANSMITTER - PROCESS VALUE	range 0..16 barg			R	
1034	/	REAL (IEEE 754)	64-PT-059-PV	PRESSURE TRANSMITTER INSTRUMENT AIR RECIEVER - PROCESS VALUE	range 0..16 barg			R	
1038	/	REAL (IEEE 754)	64-PDIT-056-PV	DIFFERENTIAL PRESSURE TRANSMITTER OUTLET FILTERS - PROCESS VALUE	range 0..1 barg			R	
1042	/	REAL (IEEE 754)	64-AT-051-PV	OXYGEN TRANSMITTER - PROCESS VALUE	range 0..100%			R	
1046	/	REAL (IEEE 754)	WATCHDOG_REAL	WATCHDOG TO CHECK COMMUNICATION	INCREMENTED by 1 every second from 0 up to 32767			R	
1050	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 001				R	**PARAMETERS**
1054	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 002				R	
1058	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 003				R	
1062	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 004				R	
1066	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 005				R	
1070	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 006				R	
1074	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 007				R	
1078	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 008				R	
1082	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 009				R	
1086	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 010				R	
1090	/	INT	FILTER_IN_USE	INFORMATION ABOUT WHICH AFTER FILTER HAS MASTER ROLE	1= FILTER A ; 2 = FILTER B			R	
1092	/	INT	CURRENT_PHASE	INFORMATION ABOUT CURRENT PHASE	0= READY TO START ; 1= A: GEN, B: DEP ; 2= EQ ; 3= A: DEP, B: GEN ; 4= EQ			R	
1094	/	INT		SPARE - INTEGER PARAMETER 001				R	
1096	/	INT	WATCHDOG_INT	WATCHDOG TO CHECK COMMUNICATION	INCREMENTED by 1 every second from 0 up to 32767			R	
1098	/	INT		SPARE - INTEGER PARAMETER 002				R	
1100	/	INT		SPARE - INTEGER PARAMETER 003				R	
1102	/	INT		SPARE - INTEGER PARAMETER 004				R	
1104	/	INT		SPARE - INTEGER PARAMETER 005				R	
1106	/	INT		SPARE - INTEGER PARAMETER 006				R	
1108	/	INT		SPARE - INTEGER PARAMETER 007				R	
1110	/	TIME (DINT)		SPARE - TIME PARAMETER 001				R	
1114	/	TIME (DINT)		SPARE - TIME PARAMETER 002				R	
1118	/	TIME (DINT)		SPARE - TIME PARAMETER 003				R	
1122	/	TIME (DINT)		SPARE - TIME PARAMETER 004				R	
1126	/	TIME (DINT)		SPARE - TIME PARAMETER 005				R	
1130	/	TIME (DINT)		SPARE - TIME PARAMETER 006				R	
1134	/	TIME (DINT)		SPARE - TIME PARAMETER 007				R	
1138	/	TIME (DINT)		SPARE - TIME PARAMETER 008				R	
1142	/	TIME (DINT)		SPARE - TIME PARAMETER 009				R	
1146	/	TIME (DINT)		SPARE - TIME PARAMETER 010				R	

N2 A-64000

PROFINET SIGNALS TABLE

Rev 4

N. BYTE	N. BIT	DATA TYPE	TAG	DESCRIPTION	MEANING	SCALING	OFFSET	READ/WRITE	
	0	BOOL	64-START-PLANT-CMD	REMOTE START COMMAND	1 = START (PULSE 1 sec)			W	**REMOTE COMMANDS**
	1	BOOL	64-STOP-PLANT-CMD	REMOTE STOP COMMAND	0 = STOP (PULSE 1 sec)			W	
	2	BOOL		SPARE				W	
	3	BOOL	64-ACK-ALARM	REMOTE ALARMS ACKNOWLEDGE	1 = ACK (PULSE 1 sec)			W	
	4	BOOL	CHANGE_FILTER	CHANGE WORKING FILTER	1= CHANGE (PULSE 1 SEC)			W	
	5	BOOL	WATCHDOG_BIT	WATCHDOG TO CHECK CONNECTION STATUS WITH DCS	1= ALWAYS AS OK CONDITION 0= FAULT			W	
	6	BOOL		SPARE				W	
1150	7	BOOL		SPARE				W	
	0	BOOL		SPARE				W	
	1	BOOL		SPARE				W	
	2	BOOL		SPARE				W	
	3	BOOL		SPARE				W	
	4	BOOL		SPARE				W	
	5	BOOL		SPARE				W	
	6	BOOL		SPARE				W	
1151	7	BOOL		SPARE				W	
1152	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 001					**PARAMETERS**
1156	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 002				W	
1160	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 003				W	
1164	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 004				W	
1168	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 005				W	
1172	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 006				W	
1176	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 007				W	
1180	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 008				W	
1184	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 009				W	
1188	/	REAL (IEEE 754)		SPARE - REAL PARAMETER 010				W	
1192	/	INT		SPARE - INTEGER PARAMETER 001				W	
1194	/	INT		SPARE - INTEGER PARAMETER 002				W	
1196	/	INT		SPARE - INTEGER PARAMETER 003				W	
1198	/	INT		SPARE - INTEGER PARAMETER 004				W	
1200	/	INT		SPARE - INTEGER PARAMETER 005				W	
1202	/	INT		SPARE - INTEGER PARAMETER 006				W	
1204	/	INT		SPARE - INTEGER PARAMETER 007				W	
1206	/	INT		SPARE - INTEGER PARAMETER 008				W	
1208	/	INT		SPARE - INTEGER PARAMETER 009				W	
1210	/	INT		SPARE - INTEGER PARAMETER 010				W	
1212	/	TIME (DINT)	PHASE_TIME_1	SET PHASE 1 DURATION [ms]	can't be lower than 50 seconds			W	
1216	/	TIME (DINT)	PHASE_TIME_2	SET PHASE 2 DURATION [ms]	can't be lower than 10 seconds			W	
1220	/	TIME (DINT)	PHASE_TIME_3	SET PHASE 3 DURATION [ms]	can't be lower than 50 seconds			W	
1224	/	TIME (DINT)	PHASE_TIME_4	SET PHASE 4 DURATION [ms]	can't be lower than 10 seconds			W	
1228	/	TIME (DINT)		SPARE - TIME PARAMETER 005				W	
1232	/	TIME (DINT)		SPARE - TIME PARAMETER 006				W	
1236	/	TIME (DINT)		SPARE - TIME PARAMETER 007				W	
1240	/	TIME (DINT)		SPARE - TIME PARAMETER 008				W	
1244	/	TIME (DINT)		SPARE - TIME PARAMETER 010				W	